



User Manual



re

WIND

-
-














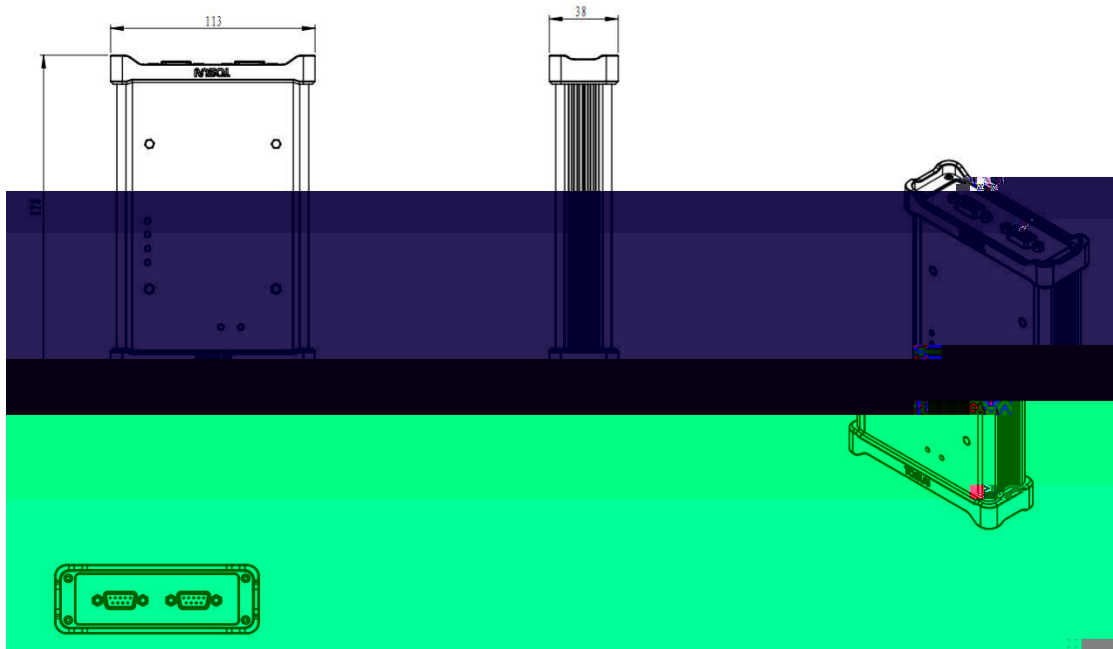

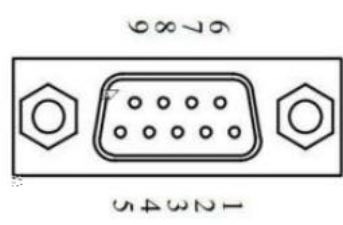

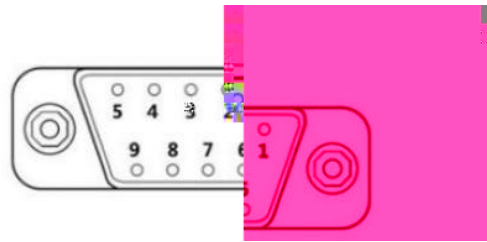[illegible]






--	--	--








		 The image shows a blue and white CANFD interface module. The label on the module reads "Toslim TC1014 Pro CANFD Interface". It lists four channels: CANFD 1, CANFD 2, CANFD 3, and CANFD 4. At the bottom, there are labels for "VDD", "GND", "SPE", and "SPC".	
		 The image shows a black cable with a USB-A connector on one end and a CANFD connector on the other.	
		 The image shows a black power adapter with a two-prong AC plug and a black power cable with a DC connector.	
		 The image shows a white cable with two CANFD connectors on one end and a CANFD connector on the other.	
		 The image shows a green CANFD connector module with a 9-pin D-sub connector on one end and a green CANFD connector on the other.	

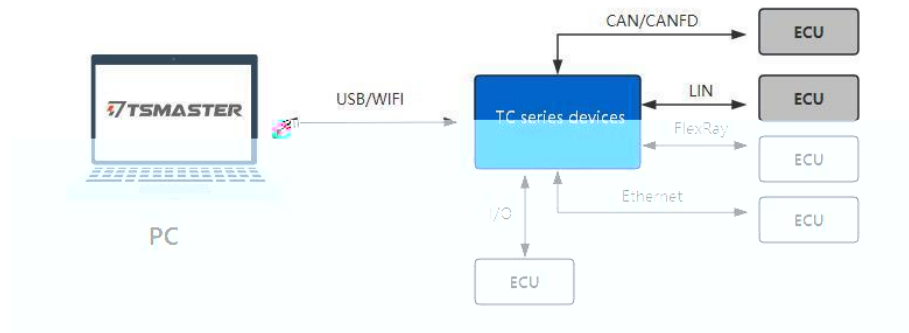

•

•

•

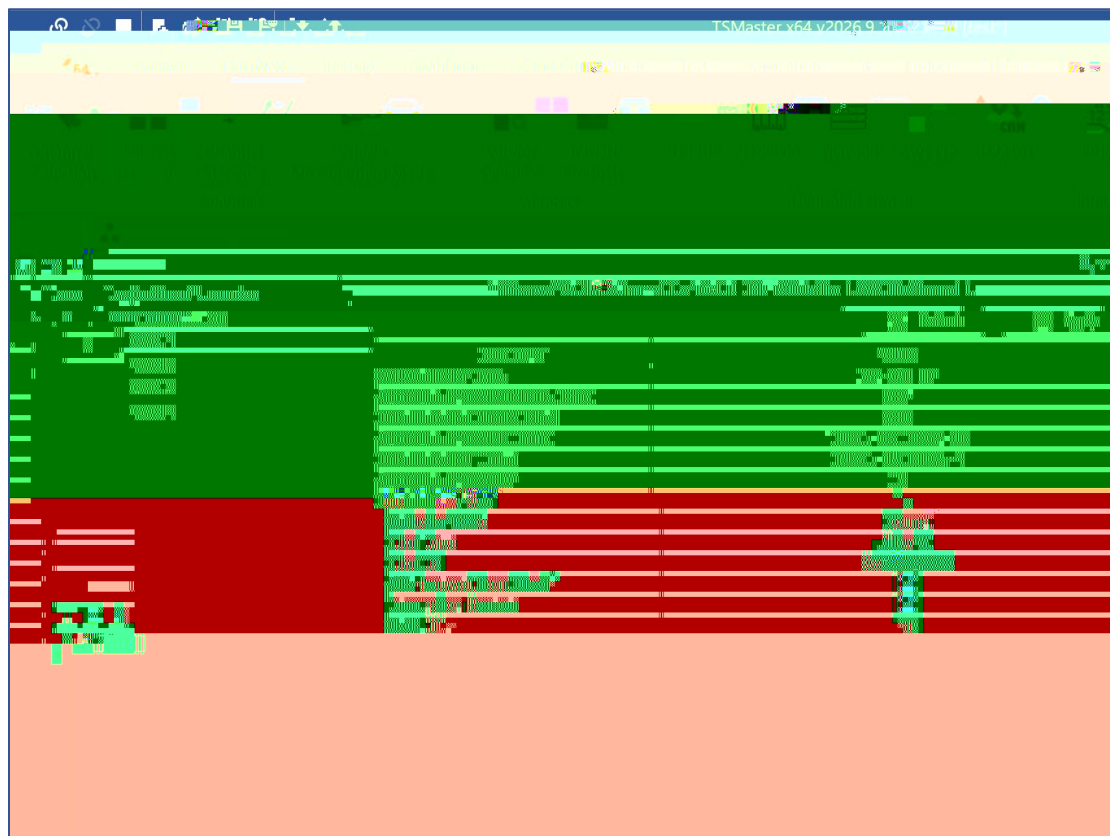

[illegible]

CAN / CAN FD Trace														
2025.10.02 10:50	Settings	Filter String:	Identifier	FP5	Message Name	Type	Dir	DLC	Data Len.	BRS	ESI	00	01	02
30.851018	Counter	2594	CAN 1	123	99	Data	Tx	8	8	-	-	00	00	00
												04	05	06
												07	08	09
												10	11	
In list: 1 / All count: 2593 0 %														

CAN Statistics	
Statistics	Channel 1
Baud Rate [Kbps]	500
Bus Load [%]	2.48
Peak Load [%]	2.52
Std. Data [fr/s]	98
Std. Data [total]	540
Ext. Data [fr/s]	0
Ext. Data [total]	0
Std. Remote [fr/s]	0
Std. Remote [total]	0
Ext. Remote [fr/s]	0
Ext. Remote [total]	0
Error Frames [fr/s]	0
Error Frames [total]	0
Controller State	Active
Tx Error Counter	0

